

EDDINGTON'S

Egg poacher

Directions for use.

Bring a pan of salted water to the boil and reduce to a gentle simmer. For the best results, add a knob of butter or a drizzle of olive oil to the bottom of your egg poacher. Then simply hook over the pan, ensuring the bottom of the egg poacher is below water level and poach your egg to perfection. The Eddingtons Egg Poacher is also designed to stand in shallow pans, or to sit the cooked eggs above water level to keep warm.

Your Egg Poacher can also be used to lift hard boiled eggs from the pan, allowing the water to drain away.

Hand wash in warm soapy water.

Non-Stick - No PFOA in the non-stick coating.